

Installation Instructions:

1. This accessory is meant for the ThinkPad i-Series Notebook machine type 2621 only (Models 142X, 144X, 146X, 148X, 154X, and 156X). Do not attempt to install this accessory on any other ThinkPad models.
2. Securely close the ThinkPad display top, and ensure the display top latches are locked. Also ensure that no power cords or any other cables are connected to the system and that the battery is inserted.
3. On the sides of the closed display top, carefully remove the four (4) screw hole covers (two on each side) to expose the screw holes (see diagram 1).
4. Place the cover on top of the closed ThinkPad, and align the screw holes with the cover holes.
5. Using the four provided screws and with the display top closed, insert the screws into the holes and gently tighten each screw using a small Phillips head type screw driver. Do not over torque the screws and only tighten until the screw head is flush with the cover and resists additional turns (see diagram 2).
6. Upon completion, your ThinkPad can be opened, used, or handled.

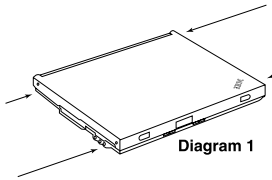


Diagram 1

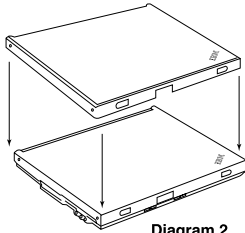


Diagram 2

The installation instructions provided with this accessory should be followed carefully to ensure proper installation. Failure to follow these instructions as written could result in damage to the accessory and/or the ThinkPad. If you have any questions pertaining to the installation of the accessory please contact the local authorized distributor.

Statement of Limited Warranty: iBrands warrants that for a period of 1 year from the date of purchase that this product 1) is free from defects in materials and workmanship and 2) conforms to its specifications. If this product does not function as warranted during the warranty period, iBrands or their authorized distributor, at their option, will either replace this product with one that is functionally equivalent or will refund your purchase price. These are your exclusive remedies under this warranty. Please call your local authorized distributor for warranty service.

This warranty will be voided by misuse, improper physical environment, accident, or improper maintenance by you. THIS WARRANTY REPLACES ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESS OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

Circumstances may arise where, because of a default on iBrands part or other liability, you are entitled to recover damages from iBrands. In each such instance, regardless of the basis on which you are entitled to claim damages from iBrands (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), iBrands is only liable for:

1. damages for bodily injury (including death) and damage to real property and tangible personal property; and
2. the amount of any other actual direct damages or loss, up to the greater of \$500 or the price paid for this product.

UNDER NO CIRCUMSTANCES IS IBRANDS OR IBM LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR LOSSES OR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF IBRANDS OR IBM ARE INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

取付け方法

1. カラーカバーは、ThinkPad i-Series 2621 (モデル 142x, 146x, 148x等)に使用可能です。その他の種類のThinkPadには取り付けないで下さい。
2. ThinkPadのトップカバーをしっかりと閉めて下さい。ラッチ (閉じ具) がロックされていることを確認して下さい。電源およびその他のケーブルが接続されていないことを確認し、バッテリーは差し込んでおいて下さい。
3. ThinkPadトップカバーの両側にある4個のネジ穴隠しを取り外すと、ネジ穴が露出します。  
※ネジ穴隠しは片側に2個ずつ、計4個あります。(図1を参照下さい。)
4. 本製品をThinkPadにかぶせて、ネジ位置を合わせます。
5. トップカバーを閉めたまま、付属品の四つのネジをドライバーで丁寧に閉めて下さい。  
※きつく締めすぎないようにご注意下さい。締めすぎは、ネジ・本製品・ThinkPadの破損や故障等の原因になります。(図2を参照下さい。)
6. 以上でカラーカバーの取付けが完了です。

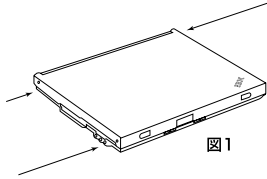


図1

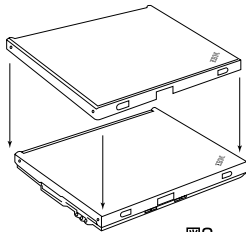


図2

本製品・ThinkPad の破損や故障等を防ぎ、本製品を正しく取り付けるため、この説明を丁寧に読んで下さい。誤って取付けを行いますと、ThinkPad 本体とカラーカバーの破損につながります。その他ご質問等ございましたら、本製品をお買いあげいただいた販売店までご連絡下さい。

本製品は米国 iBrands 社が、米国 IBM との正式なライセンス契約に基づき、製造・販売を行うものです。IBM は本製品の保証はいたしません。日本国内における本製品の保証はサンワサプライ株式会社が行ないます。保証内容の詳細は以下の通りです。

保証規定

- 1) 保証期間内に正常な状態でご使用の場合に限り品質を保証しております。万一保証期間内で故障がありました場合は、当社所定の方法で無償修理いたしますので、保証書を商品に添えてお買い上げの販売店までお持ちください。
- 2) 次のような場合は保証期間内でも有償修理になります。
  - (1) 保証登録カードをご送付いただいていない場合。
  - (2) 保証書をご提示いただけない場合。
  - (3) 所定の項目をご記入いただけない場合、あるいは字句を書き換えられた場合。
  - (4) 故障の原因が取り扱い上の不注意による場合。
  - (5) お客様による輸送・移動中の衝撃による場合。
  - (6) 天変地異、ならびに公害や異常電圧その他の外部要因による故障及び損傷。
- 3) お客様ご自身による改造または修理があったと判断された場合は、保証期間内での修理もお受けいたしかねます。
- 4) 本製品の故障、またはその使用によって生じた直接、間接の損害については当社はその責を負わないものとします。
- 5) 修理ご依頼品を郵送、またはご持参される場合の諸費用はお客様のご負担となります。
- 6) 保証書は再発行いたしませんので、大切に保管してください。
- 7) 保証書は日本国内においてのみ有効です。